


Get Started

Tiger City IMX Industrial Computer with Linux OS

Connecting Tiger to a power supply

Connect a power supply to the pins shown in the picture below. The suggested power supply is a DC voltage in range of 12-24 V.

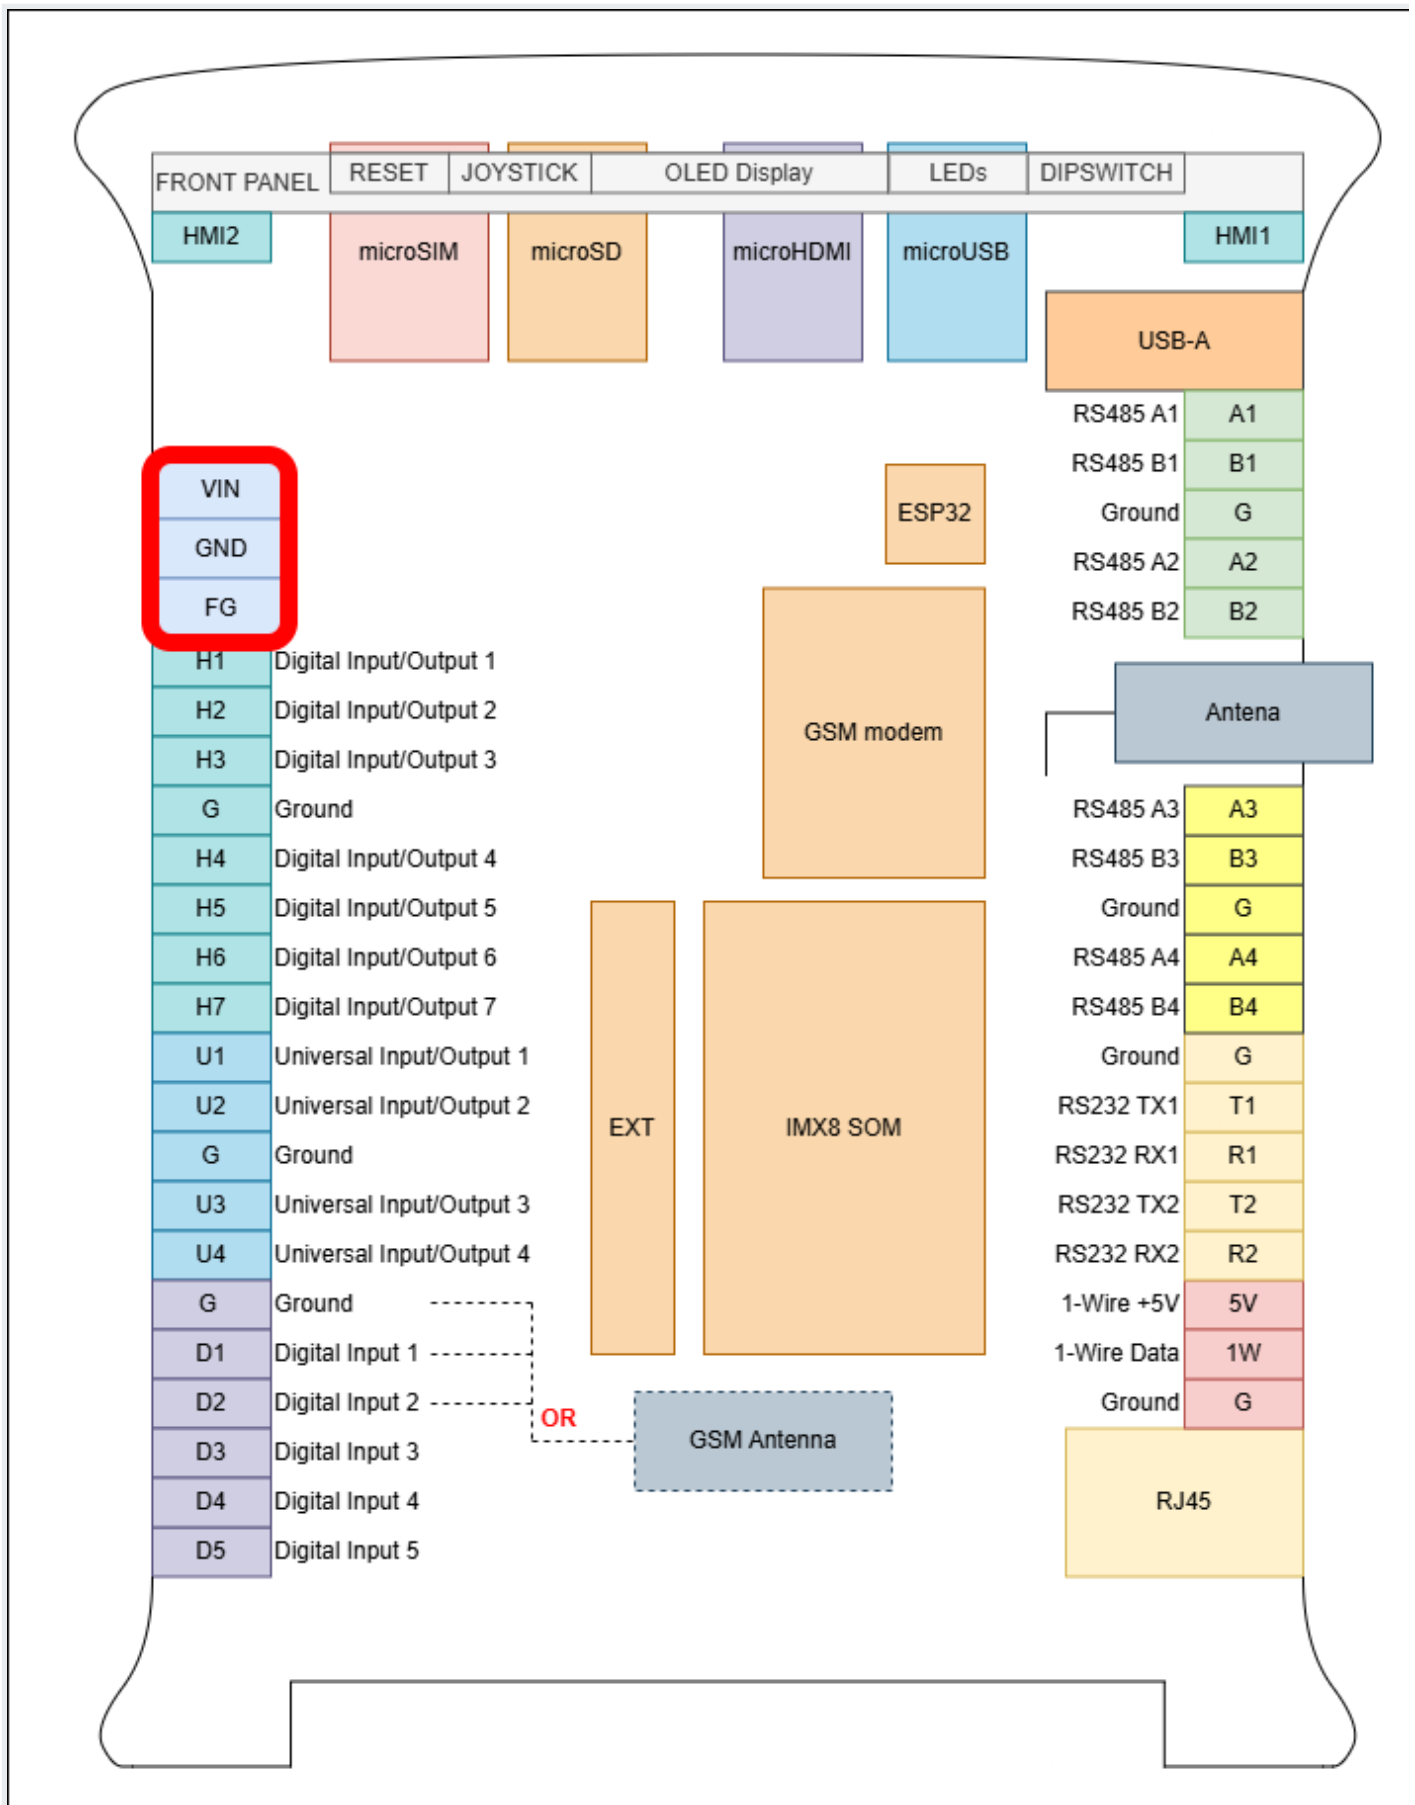

Connecting to a console

In order to connect to the system console, follow this [instruction](#).

First boot

In order to perform the first boot, follow this [instruction](#).

Revision #9

Created 8 April 2024 13:00:36

Updated 17 July 2024 12:43:22 by Jan Górski