
Get Started

Tiger City IMX Industrial Computer with Linux OS

Connecting Tiger to a power supply

Connect a power supply to the pins shown in the picture below. The suggested power supply is a DC voltage in range of 12-24 V.

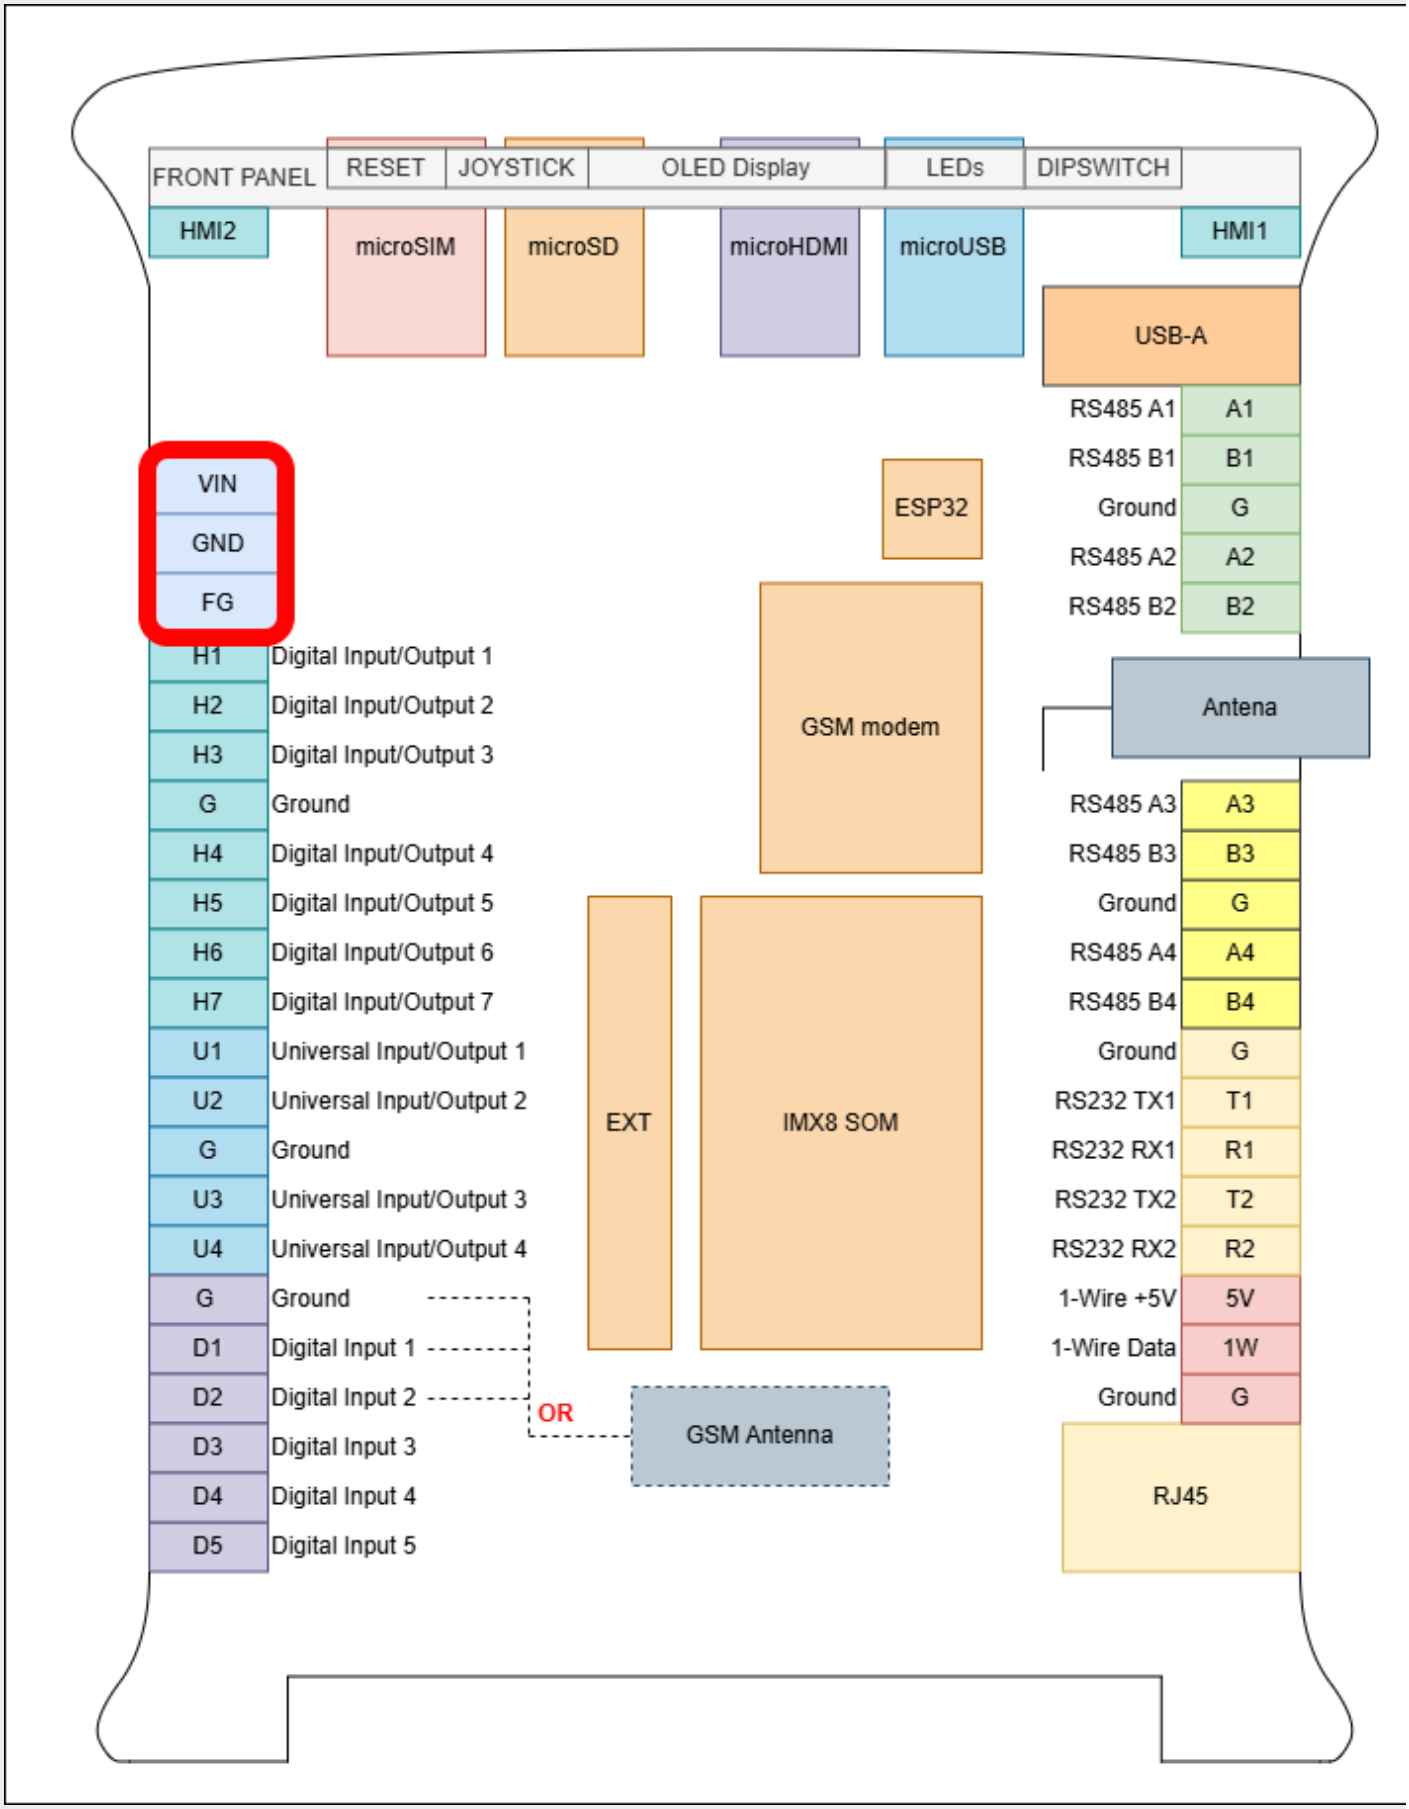

Connecting to a console

In order to connect to the system console, follow this instruction.

First boot

In order to perform the first boot, follow this instruction.

Created 2024-04-08 13:00:36 UTC
Updated 2024-07-17 12:43:22 UTC