

Data Sheet

Serial Port Server w/ Wi-Fi® (C30 - C32)

Serial Port Server is a complete hardware and software solution for creating remote communication ports. The software part can be uploaded to any of the Redisage C30 - C32 Ethernet Converters. It provides a communication between a LAN host and a device equipped with RS232/RS485 serial interfaces. A dedicated app makes it easy and fast to configure and deploy. There is a possibility to create virtual COM ports with the Redisage Configurator to minimize number of cables. Onboard Wi-Fi module makes it even more versatile and independent solution.

C30 C31 C32



Features

- Ethernet converter to RS232/RS485
- ESD protection for the RS485 data line
- Power supply: +12 to +30 VDC
- Transmission speed up to 115200 bps
- Tx, Rx and power LED indicators
- RS485 embedded termination 120 ohm
- WiFi 802.11b/g/n 150 Mbps / 2.4 GHz
- Operating temperatures: -40°C to +75°C
- DIN rail mounting
- Dimensions: 90x56.4x22.5 mm
- 3 years warranty
- Customization of OEM is welcomed

Introduction

C30 - C32 are a products family of reliable converters based on the **ESP32 Xtensa LX6** microcontroller, extending the capabilities of industrial devices.

The addition of a network interface allows remote access and full control over a communication via a computer.

The user performs the basic configuration of transmission parameters in a browser or via a Telnet/serial console.

Dedicated EMC integrated circuits guarantee improved connection quality by limiting the impact of the interferences typical for an industrial environment.


Specifications

Redisage PN		C30	C31	C32
Ports	RS232	2x	-	-
	RS485	-	1x	-
	RS232/RS485	-	-	2x
Microcontroller		ESP32		
WiFi		802.11b/g/n 150 Mbps / 2.4 GHz		
Power	Voltage	12-30 VDC		
	Power	< 1 W		
Frame ground connection		yes		
Baud rate		up to 115200 bps		
LED indicators		communication Tx, Rx and power		
RS485 termination		120 ohm manually enabled		
Connector	RS232/RS485	8-pin terminal block max. 2.5 mm ² wire		
	Power	3-pin terminal block max. 2.5 mm ² wire		
	Ethernet	RJ45		


Redisage PN		C30	C31	C32
Transmission distance	RS485	max. 1,200 m at 9.6 kbps; max. 400 m at 115.2 kbps (Belden 9841 2P twisted-pair cable, if different cables are used, the transmission distance may change)		
Mounting and enclosure		DIN rail, plastic PA - UL 94 V0, black/green		
Temperatures		-40°C to +75°C operating and storage		
Humidity		10 - 90% RH, non-condensing		
ESD protection		±4 kV contact discharge / ±8 kV air discharge		
Certification		CE, RoHS, RED		
Norms		61000-6-2 - Immunity standard for industrial environments 61000-6-4 - Emission standard for industrial environments EN 300 328 - Data transmission equipment operating in the 2,4 GHz band		

Variants

C30 - Serial Port Server (2x RS232) + Wi-Fi

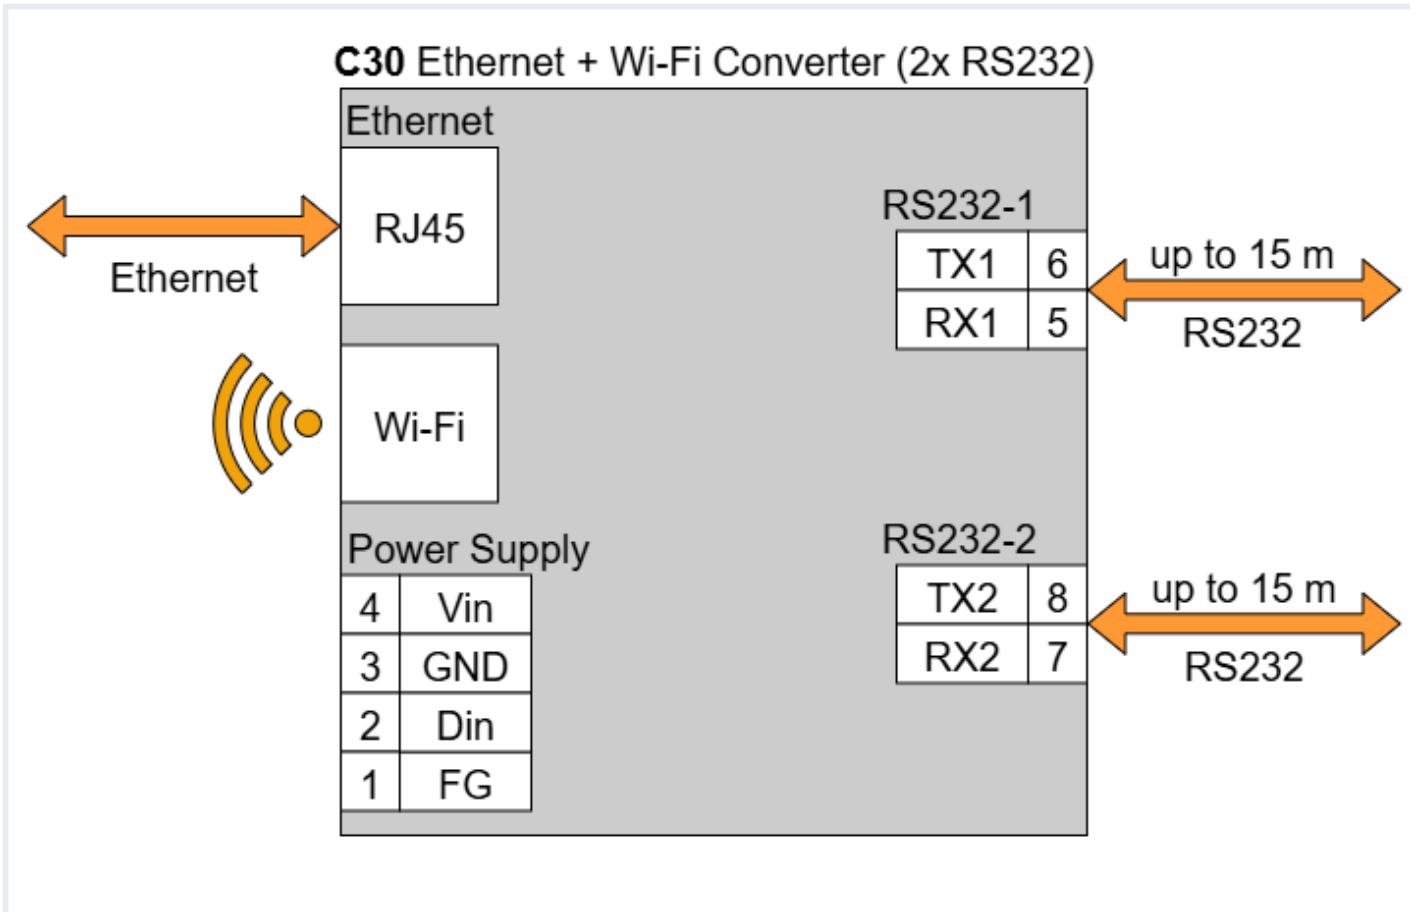


C31 - Serial Port Server (1x RS485) + Wi-Fi

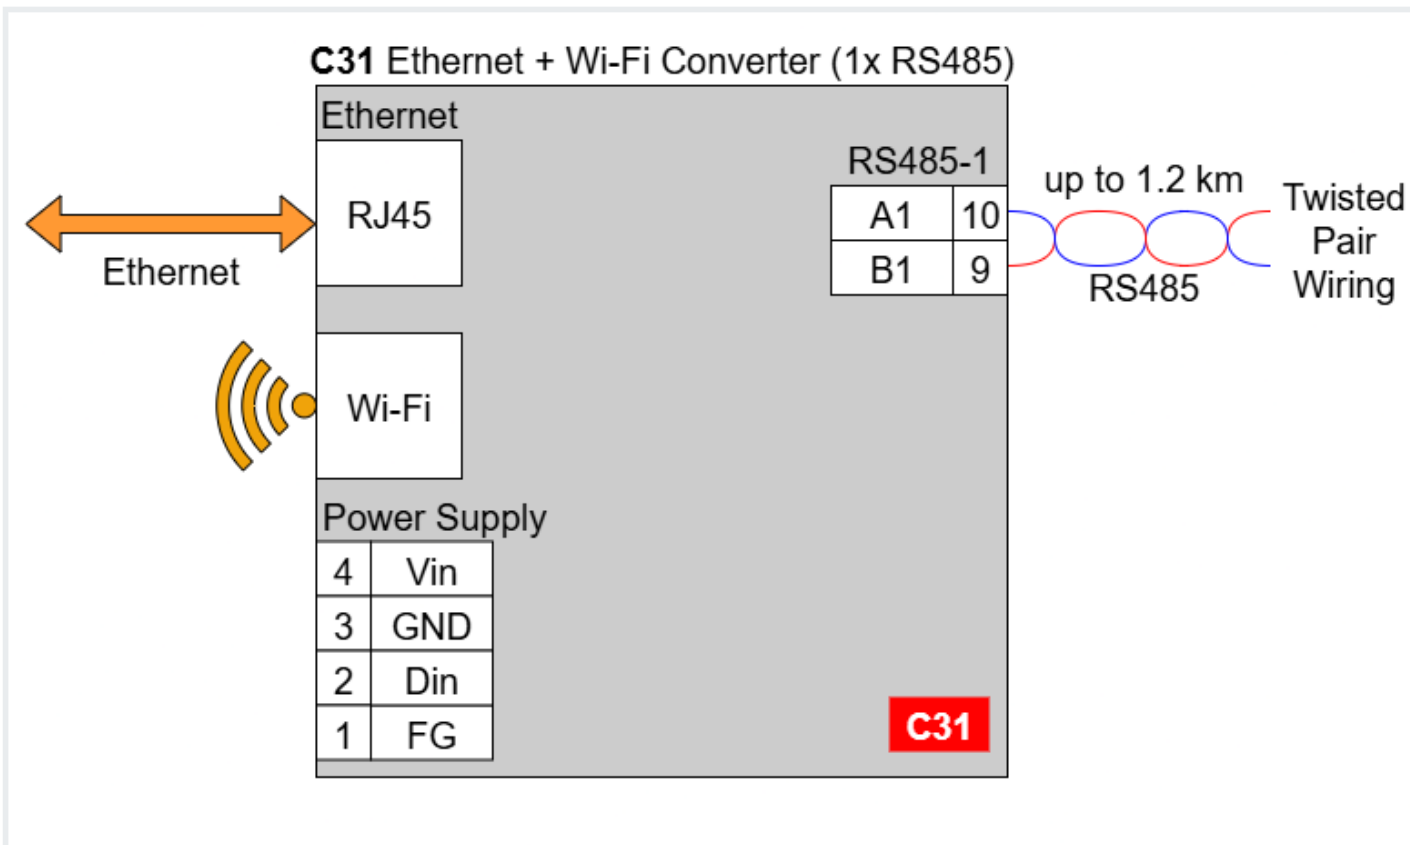

C32 - Serial Port Server (2x RS232/RS485) + Wi-Fi

C32 Ethernet Converter (2x RS232/RS485)

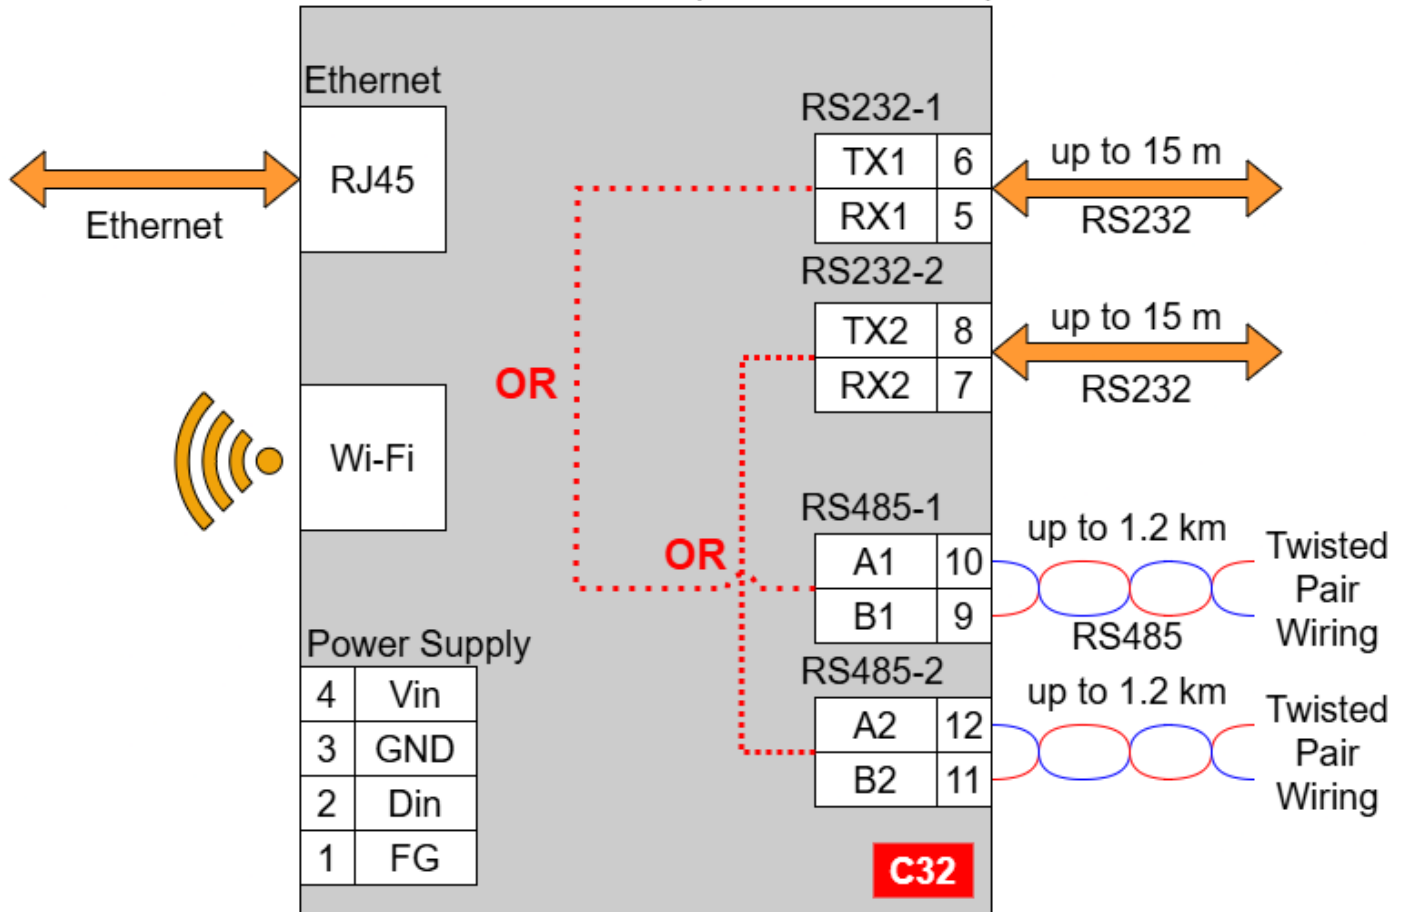


..... You can use only one of these ports at the same time!*

* In the C32 converter user should use only RS232 or only RS485 interface of one port as they occupy the same internal bus of the device. It means, don't use pairs: RS232-1 & RS485-1 at the same time and RS232-2 & RS485-2 at the same time!

Frame ground FG

Electronic circuits are constantly prone to electrostatic discharge ESD. Redisage Electronics modules feature a design for the frame ground terminal block FG. The frame ground provides a path for bypassing ESD, which provides enhanced static protection ESD abilities and ensures the module is more reliable. Connecting FG terminal block to the earth ground will bypass the ESD disturbances outside the device so will provide a better level of protection against ESD.

Frame Ground FG connection reference drawing is provided below.

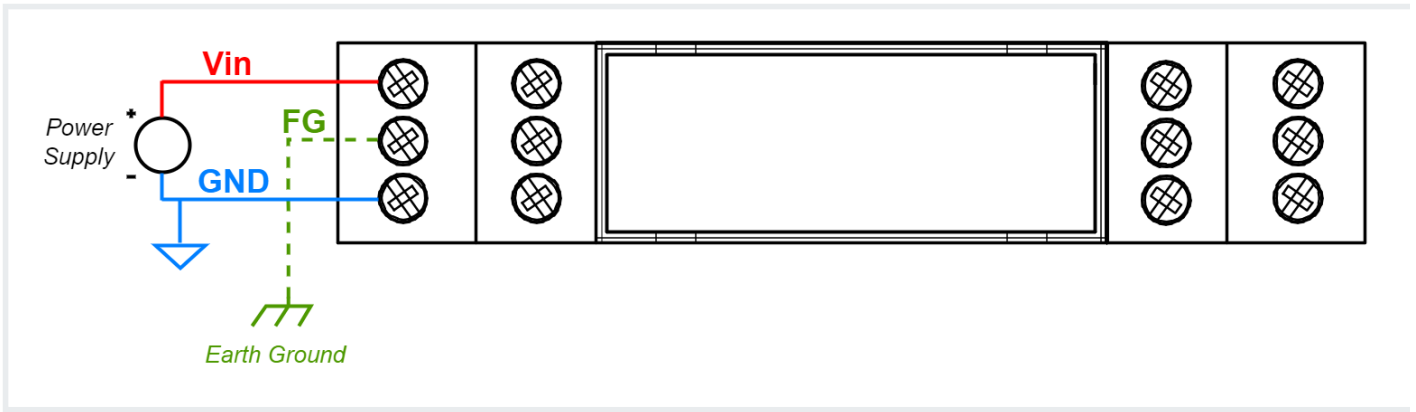

If earth ground is not available FG can be left floating or it can be connected with the power supply GND.

Pin assignments

C30

C30 Wi-Fi Ethernet
2xRS232 Converter

123456789012345

Power: --- 12-30V/DC <1W
Temperature: -40°C +75°C
Port: 2xRS232 ETH
Wi-Fi: 802.11b/g/n
Ethernet: 10/100BaseT
MAC: 1a2b3c4d5e6f
REV1 MADE IN EU

4 Vin	8 Tx2	NC	Ethernet RJ45
3 Gnd	7 Rx2		
2 Din	6 Tx1		
1 FG	5 Rx1		

1a2b3c4d5e6f

C31

C31 Wi-Fi Ethernet
1xRS485 Converter

123456789012345

Power: --- 12-30V/DC <1W
Temperature: -40°C +75°C
Port: 1xRS485 ETHERNET
Wi-Fi: 802.11b/g/n
Ethernet: 10/100BaseT
MAC: 1a2b3c4d5e6f
REV1 MADE IN EU

4 Vin	NC	12 NC	Ethernet RJ45
3 Gnd		11 NC	
2 Din		10 A1	
1 FG		9 B1	

SC - Software Control

1a2b3c4d5e6f

C32

C32 Wi-Fi Ethernet
Converter

123456789012345

Power: --- 12-30V/DC <1W
Temperature: -40°C +75°C
Port: 2xRS232/RS485 ETH
Wi-Fi: 802.11b/g/n
Ethernet: 10/100BaseT
MAC: 1a2b3c4d5e6f
REV1 MADE IN EU


4 Vin	8 Tx2	12 A2	Ethernet RJ45
3 Gnd	7 Rx2	11 B2	
2 Din	6 Tx1	10 A1	
1 FG	5 Rx1	9 B1	

SC - Software Control

1a2b3c4d5e6f

LED indicators

Converters C30 - C32

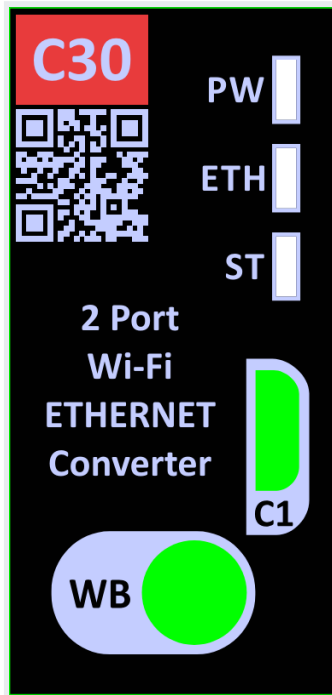


LED indicator	Color	Function
PW	Blue	Power
ETH	Green	Network activity
ST	Orange	Console mode
	Red	Service mode

Enclosure dimensions

2U Module Enclosure

98 x 22.5 x 56.4

Units: mm

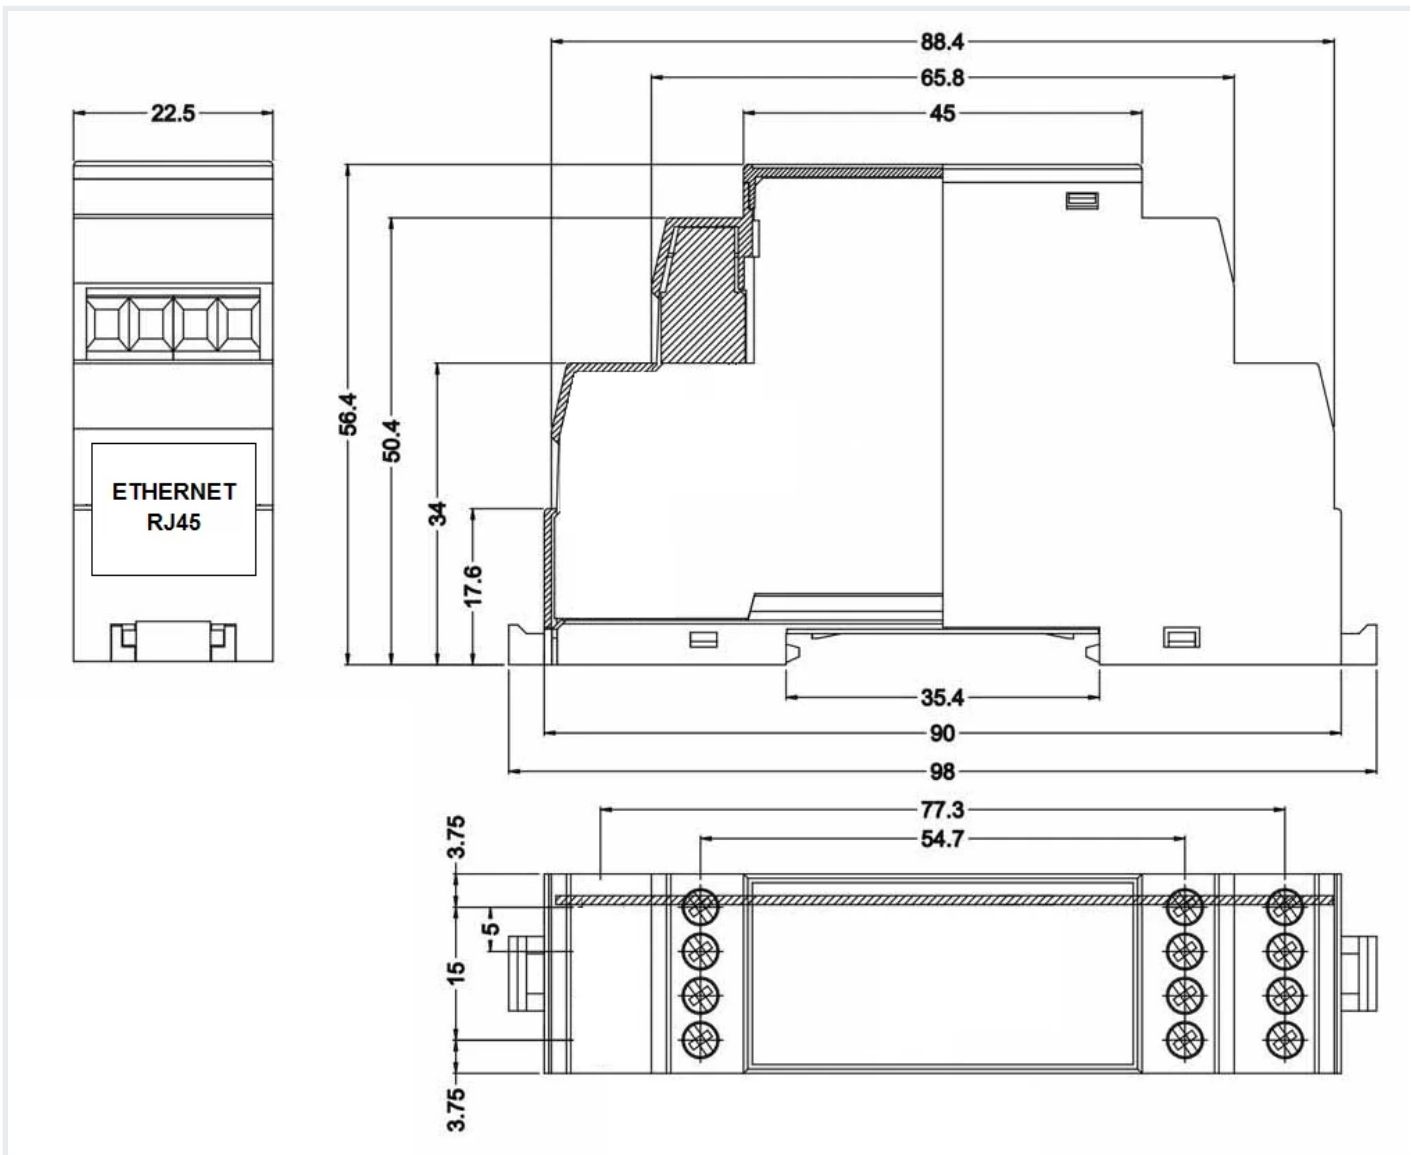

Getting started

Power supply

Ethernet converters C30 - C32 have wide voltage power input (12-30 VDC) and the power consumption is less than 1 W.

Check [user manual](#) before first launch.

Reset to Factory Defaults

Reset to factory defaults is possible on the web page in the device section or using the service mode.

Service mode

Procedure to enter service mode for C30 - C32 converters

- Turn off the power of the device.
- Connect Ethernet converter to the dedicated USB/UART converter via the microUSB port.
- Connect the USB/UART converter to the PC.
- Open the serial console (default baud rate is 115200 bps).
- Short the DI and GND ports.
- Turn on the power.
- Wait until the ST indicator (red LED) lights up.
- Open the the DI and GND ports.
- If the process is successful, service commands can be typed into the terminal.

List of commands in the service mode

Command	Description
help	Print the help.
credits	Print current credits value for this device.
dev_ident	Print the device identification value.
restart	Restart the system.
serial_num	Print the serial number of this device.
version	Display the bootloader version.
xmodem	Download image to the internal flash using xmodem.
defaults	Reset application variables to defaults.
ipconfig	Print or change the network configuration.
flash_read	Read bytes from flash memory.
md	Read bytes from memory address.

In the service mode, the “ipconfig” command can only show a last static IP address.

Additional notes

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Related information and links

[Ordering information](#)

[Accessories](#)

[Similar products](#)

Products family sample photo



<https://redisage.com>

DISCLAIMER NOTES

ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Datasheet-ID:

SR-D

Revision #36

Created 11 April 2024 10:33:05

Updated 3 March 2026 09:48:14 by Michał Grabski